



WASHING INSTRUCTIONS

Care and washing instructions for canopies and side walls of Pro-Tent systems

Washing affect the quality of polyester fabrics. It strains membrane and coating and the waterproofing can get lost. We recommend to wash the fabrics as less as possible.

Light pollution

Wash canopy and side panels with a damp sponge and mild soap.

Strong pollution

We recommend a professional laundry or wash fabrics with a special detergent for delicate laundry, without conditioner at max. 30° C. It is recommended that the wet canopy and side panels have to be hang up in the air to dry.

Attention

Canopy and side panels should be removed and stored only when completely dry.

PRO-TENT GmbH
Zelt- und Messebau-Systeme
Im Brühl 1
65589 Hadamar-Ndz.
Germany
Tel.: +49 (0) 6433 946668-0
info@pro-tent.de
www.pro-tent.de

PRO-TENT AG
Zelt- und Messebau-Systeme
Neuhofstrasse 1
08630 Rüti
Switzerland
Tel.: +41 (0) 55 220 28 00
info@pro-tent.ch
www.pro-tent.ch